Installation Instructions

002-0732-00
Work Surface Support Bracket Kit

Kit Components

Description	Part Number	Qty
Support Bracket	051-1035-50	1
Caution Label	061-0849-00	1
Drywall Screws:		
#8 x 1-1/2"	040-0008-53	3

Installation

(1) Swing work surface arm (1, Figure 1) to side.

(2) Align center hole (A) in support bracket (2) with hole (B) in mounting plate (3); secure with screw (4).

(3) Swing work surface arm (1) as necessary to install two screws (5).

(4) Apply label (6) to work surface arm (1).

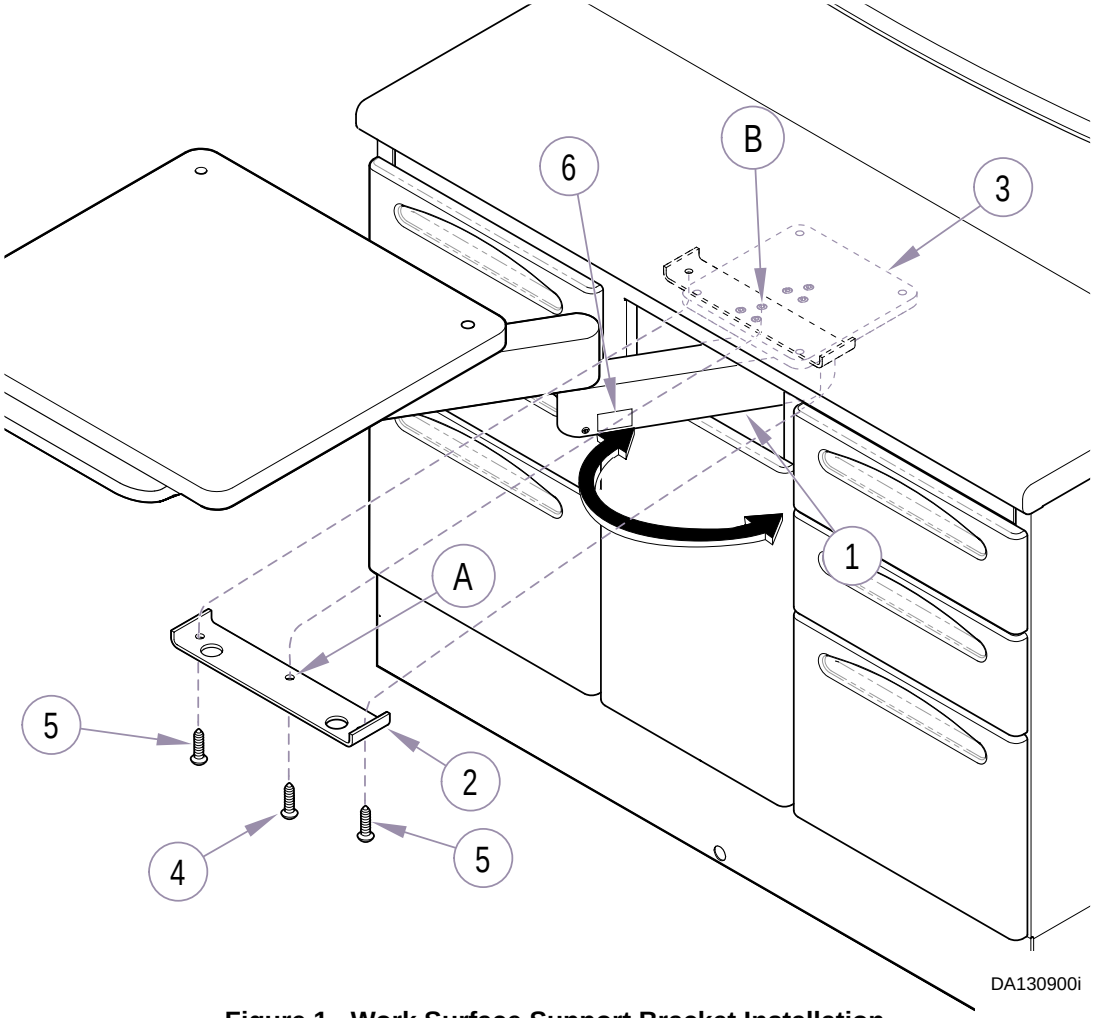

Figure 1. Work Surface Support Bracket Installation

© Midmark Corporation 2003